



**UR19A  
SUPERREMOTE**

**OWNER'S MANUAL**





## — READ THIS FIRST! —

### SAFETY CONSIDERATIONS

**Remember to exercise good common sense when using the Home Automation features of your SuperRemote - especially when scheduling unattended devices. There can be some unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turned on. If that should happen, your coffee pot could be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. DO NOT USE the remote for the control of high power heating appliances such as portable heaters.**

**Caution:** To reduce the risk of electric shock, do not disassemble any part of the Home Automation System's plug-in Modules or Controllers. No user-serviceable parts are inside. If you spill liquid on a unit, disconnect the unit from the AC outlet to prevent possible fire or shock hazard and consult authorized service personnel.

Powerline operated equipment or accessories connected to any of these units should bear the UL listing or CSA certification mark and should not have been modified in any way that might defeat their safety features.

**Warning:** To prevent electric shock hazard, do not expose any part of the Home Automation System to rain or moisture

### FCC CAUTION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- Reorient the antenna of the radio/TV experiencing the interference.
- Relocate the interface with respect to the radio/TV.
- Move the interface away from the radio/TV.
- Plug the interface into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- If necessary, consult your local Dealer for additional suggestions.

**NOTE:** Modifications to any of the components in this kit will void the user's authority to operate this equipment.





## CONTENTS

<b>INTRODUCTION</b> .....	<b>5</b>
<b>GETTING STARTED</b> .....	<b>6</b>
CONTROLLERS AND MODULES .....	6
HOUSE CODES AND UNIT CODES .....	7
<b>INSTALLING THE COMPONENTS</b> .....	<b>8</b>
TRANSCIVER MODULE .....	8
LAMP MODULE .....	8
6-IN-1 SUPERREMOTE .....	9
<b>SETTING UP YOUR SUPERREMOTE</b> .....	<b>10</b>
BUTTON DESCRIPTIONS .....	10
SETTING UP FOR TV, VCR, CABLE BOX AND SATELLITE RECEIVER ..	11
USING AUX TO CONTROL A SECOND TV, VCR, CABLE BOX OR SATELLITE RECEIVER .....	22
SEARCHING FOR CODES .....	23
IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE .....	24
SETTING THE SLEEP TIMER .....	25
<b>CONTROLLING X-10 MODULES</b> .....	<b>26</b>
TO SET THE X-10 SLEEP TIMER .....	26
CHANGING THE X-10 HOUSE CODE:	27
CONTROLLING AN IR MINI CONTROLLER .....	28
<b>EXPANDING YOUR SYSTEM</b> .....	<b>29</b>
<b>TROUBLESHOOTING</b> .....	<b>31</b>
<b>WARRANTY</b> .....	<b>32</b>

## INTRODUCTION

Congratulations on your purchase of the X-10 SuperRemote.

***Make your lights and appliances go to work for you....***

The X-10 SuperRemote will control most or all of your video and audio equipment. But what really sets it apart from other remotes is that you can also control almost any light or appliance in your home - even in another room! And it's easy to set up. Within minutes, you can be using your X-10 SuperRemote to dim the lights, start brewing a fresh pot of coffee and play your favorite movie!\*

***Here are just some of the things you can do with your X-10 SuperRemote...***

- Control your entire audio/video and lighting setup for the ultimate Home Theater experience.
- Turn on lights at night to scare away intruders if you hear a noise.
- Start the coffee from your bedroom when you wake up.
- Turn on your electric blanket before the movie ends, so you it's nice and warm when you go to bed.

***Use this manual to become familiar with your SuperRemote....***

This manual will explain how to set up your SuperRemote to use it with your existing Audio/Video equipment.

Next it will show you how you can use it to set up an X-10 Transceiver Module and Lamp Module (sold separately) to operate electrical products in your home.

Finally, the manual will show you can expand your system with some of the many additional X-10 products you can purchase.

\* Requires X-10 Modules, sold separately.



## GETTING STARTED

Because we know that you are eager to get started, we've kept this introduction as short as possible, but it contains very valuable information, so you should read through it very carefully.

### CONTROLLERS AND MODULES

The first thing you need to understand is that there are two different devices you need to control your house; Controllers and Modules.

Any light or appliance that you want to control is plugged into a Module and that Module is then plugged into a standard AC outlet.

Modules receive commands from Controllers. Examples include the Lamp Module (sold separately). The Transceiver Module (also sold separately) is another example (although it also doubles as a controller as described later).

 
Controllers are also plugged into standard wall outlets and send commands to Modules over your existing electrical wiring in your house without affecting your electricity in any way.

The Transceiver Module works as a controller when it is used with a remote control such as the SuperRemote. When the Transceiver Module receives a command from a remote it sends digital signals over your existing house wiring to a Module which receives the signals and executes the command.

The remote uses radio frequency (RF) signals to send commands to the Transceiver module. RF signals can go right through walls, so you can use the remotes to control lights or appliances from anywhere in your home.



## HOUSE CODES AND UNIT CODES

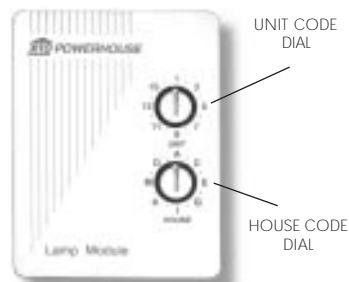

Each Module has a specific address made up of a House Code (red dial on the face of the Module) and a Unit Code (black dial on the face of the Module).

The Controller first sends an address and then a command on the AC power lines. Only the Module with a matching address will execute the command. If more than one Module has the same address, both Modules will execute the command.

Addresses are set on the Module by turning the two dials on the front of the Module to the desired letter and number (using a small screwdriver or a coin). The House Code is selected from the letters A through P, and the Unit Code is selected from the numbers 1 through 16.





## INSTALLING THE COMPONENTS

### TRANSCIVER MODULE

The Transceiver Module (sold separately) receives radio frequency (RF) commands from the SuperRemote to operate a lamp or appliance plugged into it. The Transceiver Module also passes on commands over your house wiring to control other X-10 modules (also sold separately). Note that unlike the Lamp Module you cannot dim and brighten a lamp connected to the Transceiver Module.

You should locate the Transceiver Module centrally in the home for maximum range when controlled by the SuperRemote.

1. Set the House Code to 'A.'



2. Plug a lamp or appliance into the Transceiver Module.



3. Plug the Transceiver Module into a convenient AC outlet. Fully extend the antenna.



### LAMP MODULE

The Lamp Module may be used to control any incandescent lamp rated up to 300W. It is not suitable for other types of lamp such as fluorescent or energy saving lamps, or lamps which include a dimmer control.

**Caution:** Do not connect an appliance such as a coffee pot or heater to the Lamp Module. It may damage the module and the appliance and could cause a fire hazard.

1. Set the House Code to 'A' and the Unit Code to '2.'



2. Plug a lamp into the Lamp Module.



3. Plug the Lamp Module into a convenient AC outlet.



### 6-IN-1 SUPERREMOTE

The 6-in-1 SuperRemote allows you to control practically everything electrical in your home. It has IR technology that lets you control all your TV, VCR, Cable and Satellite equipment, and X-10 RF technology that lets you control lamps and appliances anywhere in your home.

To find out more about configuring the SuperRemote to work with your audio/video equipment, see the section titled "Setting Up your SuperRemote."

1. Push the tab and lift off the battery cover.



2. Fit two AAA batteries, taking care to match the + and - marks in the battery compartment.





## SETTING UP YOUR SUPERREMOTE

### BUTTON DESCRIPTIONS

#### INDICATOR LIGHT

The indicator light flashes when the remote is operating.

#### POWER

Works in the same way as your original remote.

#### SET UP

Used for programming the remote.

#### X-10

Lets you control X-10 modules to operate lamps and appliances around the home.

#### TV, VCR, CBL, AUX1, AUX2, SAT

Used to select the device to control. SAT includes DSS receivers.

#### 0-9

Used as your original remote and to enter device codes.

#### LAST

Selects the last channel viewed on your TV, VCR, Cable Box or Satellite Receiver.

#### CHANNEL

Works like your original remote. Also used to switch X-10 modules on and off.

#### MUTE

Works the same as your original remote.

#### VOLUME

Works like your original remote. Also used to brighten and dim lamps connected to X-10 Modules.

#### TIMER

Used to set the Sleep Timer to automatically switch off the TV or X-10 modules after a preset time.

#### DISP

Used to access on-screen information or CD programming.

#### PLAY, REW, FF, STOP

Work the same as on your original remote.

#### SELECT

Used for menu selections on DSS receivers.

#### GUIDE

Displays the main menu on DSS receivers.

#### REC

 
Record button. Works the same as your original remote. You must press the REC button twice to begin recording.

#### PAUSE

Works the same as your original remote.

### SETTING UP FOR TV, VCR, CABLE BOX AND SATELLITE RECEIVER

1. Turn on the device you wish to control (TV, VCR, cable box, satellite receiver etc.).

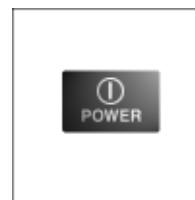


2. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



3. Press and release the mode button that matches the device you want to control. The LED blinks once. Use AUX for CD equipment.



 4. Enter the 3 digit Code from the Library Code Tables. The LED turns off after the last digit entered.

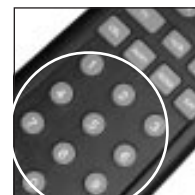




5. Point the remote at the device and press the POWER button. Your device should turn off.



 6. Turn your device on and press CHANNEL+. If the device responds, setup is complete.

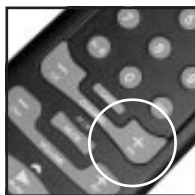

**Notes:**

*For CD players use the AUX buttons.*

*If your TV/VCR/Cable Box/Satellite Receiver does not respond, try the other codes for your brand. If it still doesn't respond, try the Code Search method on page 23.*

*If the LED blinked rapidly when you entered the code, you may have entered an invalid code. Recheck the code in the code list and try again.*

*If some buttons do not operate your equipment, try one of the other codes for your brand.*

**TV CODES**

ABEX .....	185
ACME .....	003
ADA .....	016
ADC .....	012,096
ADMIRAL .....	014,186
ADVENTURA .....	187
AIKO .....	029
ALLERON .....	059
AMTRON .....	051
AKAI .....	015
AMSTRAD .....	202
ANAM NATIONAL .....	016,051,055,205,206,207
AOC .....	017,018,020,022,188,189,208
AUDIOVOX .....	051
BELCOR .....	017
BELL & HOWELL .....	014,062,096
BRADFORD .....	051
BROKWOOD .....	017
CANDLE .....	017,021,022,187
CAPEHART .....	188
CELEBRITY .....	015
CENTURION .....	022
CETRONIC .....	055
CITIZEN .....	017,021,022,029,051
.....	055,084,118,184,187,190
CLAIRTONE .....	189

CLASSIC .....	055
COLORTYME .....	017,022,023,213
CONCERTO .....	017,022
CONTEC/CONY ..	024,025,026,027,051,055,189
CRAIG .....	051,055
CROWN .....	051,055,184
CURTIS MATHES .....	013,017,022,028
.....	062,084,118,184
CXC .....	051,055
DAEWOO .....	017,018,022,029,030
.....	031,055,098,139,140,184
DAYTRON .....	017,022,184
DIMENSIA .....	013
DUMONT .....	017,164
DYNASTY .....	055
DYNATECH .....	191
ELECTROBAND .....	015,189
ELECTROHOME .....	016,017,022,034,035
EMERSON .....	017,022,025,027,036,037,038,039
.....	040,043,044,045,046,047,048,049,050
.....	051,052,053,054,055,056,057,058,059
.....	060,062,136,137,176,184,189,190,192,210
ENVISION .....	017,022
FISHER .....	062,063,064,193
FUJITSO .....	059
FUNAI .....	051,055,059
FUTURETEC .....	051,055
GE .....	013,016,017,022,035,065,067,068
.....	100,176,177,178,179,180,181,194
GIBRALTER .....	017,164
GOLDSTAR .....	017,018,022,025,069
.....	070,071,168,169,184,185
GRUNDY .....	051,059,184
HALLMARK .....	017,022
HARWARD .....	051
HITACHI .....	017,022,024,025,026,072,073
.....	074,100,150,151,152,153,154,155
.....	156,157,158,159,160,161,163,192,211,212
IMA .....	051
INFINITY .....	075
JANEIL .....	187
JBL .....	075
JCB .....	015
JC PENNY .....	013,017,018,021,022,035,065
.....	067,071,076,077,084,100,118
.....	141,184,185,194,214
JENSEN .....	017,022
JVC .....	024,025,026,067,073,078
.....	079,080,102,171,172,195
KAWASHO .....	015,017,022
KAYPANI .....	188
KEC .....	055
KENWOOD .....	017,022
KLOSS NOVABEAM .....	081,082,187,196
KTV .....	051,055,083,184,189,190
LODGENET .....	096
LOEWEE .....	075
LOGIK .....	096
LUXMAN .....	017,022
LXI .....	013,022,062,075,084,194
MEGATRON .....	022,072





MAGNAVOX ..... 017,021,022,075,081,082  
 ..... 087,088,089,090,101,102  
 ..... 143,144,145,146,147,196,197  
 MAJESTIC ..... 096  
 MARANTS ..... 075  
 MARANTZ ..... 017,022,075,091  
 MATSUI ..... 075  
 MEI ..... 189  
 MEMOREX ..... 014,022,062,095,096  
 MGA ..... 017,018,022,034,035  
 ..... 059,064,092,093,095  
 MIDLAND ..... 067,164,184,185,194  
 MINUTZ ..... 065  
 MITSUBISHI ..... 017,018,022,034,035,059  
 ..... 064,092,093,094,095,102,138  
 MONTGOMERY WARD ..... 096  
 MOTOROLA ..... 016,186  
 MTC ..... 017,018,022,084,118,189,191  
 MULTITECH ..... 051,191  
 MULTIVISION ..... 097  
 .....  
 NAD ..... 022,084,198  
 NEC ..... 016,017,018,022,098,102,108,213  
 NIKEI ..... 055  
 NIKKO ..... 022,029  
 NTC ..... 029  
 .....  
 ONKING ..... 055  
 ONWA ..... 051,055  
 OPTIMUS ..... 198  
 OPTONICA ..... 108,186  
 ORION ..... 048  
 .....  
 PANASONIC ..... 016,067,075,183  
 PHILCO ..... 016,017,018,021,022,025  
 ..... 075,081,082,087,088,090,196,197  
 PHILIPS ..... 016,017,019,021,022,025,075,081  
 ..... 082,087,088,089,099,100,101,102  
 PILOT ..... 017,184  
 PIONEER ..... 017,022,103,104,105,192,198  
 PORTLAND ..... 017,018,022,029,184  
 PRICE CLUB ..... 118  
 PRISM ..... 067  
 PROSCAN ..... 013,194  
 PROTON ..... 017,022,025,106,188,199  
 PULSAR ..... 164  
 PULSER ..... 017  
 .....  
 QUASAR ..... 016,067,083,107  
 .....  
 RADIO SHACK/REALISTIC ..... 013,017,022,024,025  
 ..... 051,054,055,062,108,184,185  
 RCA ..... 013,016,017,018,020,022,109,111,112  
 ..... 113,114,115,116,142,192,194,200,201  
 RHAPSODY ..... 189  
 RUNCO ..... 164  
 .....  
 SAMPO ..... 017,022,184,185,188  
 SAMSUNG ..... 017,018,022,024,025,028  
 ..... 084,117,118,119,184,185,214,217  
 SAMSUX ..... 184  
 SANYO ..... 017,062,063,093,120,121,182,193  
 SCOTCH ..... 022  
 SCOTT ..... 017,022,025,037,048,051,055,059  
 SEARS ..... 013,017,022,026,059,062,063,064  
 ..... 079,084,118,122,123,193,194,202,210  
 SHARP ..... 017,022,025,108,124,125  
 ..... 126,127,135,184,186  
 SHOGUN ..... 017  
 SIGNATURE ..... 014,096,128

SIMPSON ..... 021  
 SONIC ..... 189  
 SONY ..... 015,019  
 SOUNDESIGN ..... 017,021,022,051,055,059  
 SQUAREVIEW ..... 202  
 SSS ..... 017,051,055  
 STARLITE ..... 051  
 SUPREMACY ..... 187  
 SUPREME ..... 015  
 SYLVANIA ..... 017,021,022,075,081  
 ..... 082,087,088,089,090  
 ..... 101,129,174,196,197  
 SYMPHONIC ..... 046,051,202  
 .....  
 TANDY ..... 186  
 TATUNG ..... 016,191  
 TECHNICS ..... 067  
 TECHWOOD ..... 017,022,067  
 TEKNIKA ..... 017,018,021,022,025,026  
 ..... 029,051,055,059,084,089  
 ..... 095,096,118,183,184,187  
 TELECAPTION ..... 130  
 TELERENT ..... 096  
 TERA ..... 199  
 TMK ..... 017,022  
 TOSHIBA ..... 062,084,102,118  
 ..... 122,130,131,173,214  
 TOTEVISION ..... 184  
 .....  
 UNIVERSAL ..... 065,100  
 .....  
 VICTOR ..... 079,195  
 VIDTECH ..... 017,018,022  
 VIKING ..... 187  
 .....  
 WARDS ..... 013,014,017,018,022,037,046  
 ..... 059,065,075,081,082,087,088  
 ..... 089,096,100,101,108,132,133,197  
 .....  
 YAMAHA ..... 017,018,022  
 YUPITERU ..... 055  
 .....  
 ZENITH ..... 096,134,164,165,166,167

## VCR CODES

ADMIRAL ..... 014  
 ADVENTURA ..... 039  
 AIKO ..... 040  
 AIWA ..... 015,039  
 AKAI ..... 016,017,018,019,020  
 ..... 021,124,125,126  
 AMERICAN HIGH ..... 034  
 ASHA ..... 026  
 AUDIO DYNAMICS ..... 022,023  
 AUDIOVOX ..... 027  
 .....  
 BELL & HOWELL ..... 024  
 BEAUMARK ..... 026  
 BROKSONIC ..... 025,038  
 .....  
 CALIX ..... 027  
 CANDLE ..... 026,027,028,029,030,031,032  
 CANON ..... 034,035,127  
 CAPEHART ..... 033,123  
 CARVER ..... 075  
 CCE ..... 040,074  
 CITIZEN ..... 026,027,028,029  
 ..... 030,031,032,040  
 COLORTYME ..... 022







COLT ..... 074  
 CRAIG ..... 026,027,036,074  
 CURTIS-MATHES ..... 013,015,022,026  
 ..... 029,031,034,035  
 CYBERNEX ..... 026  
 .....  
 DAEWOO ..... 028,030,032,038,039  
 ..... 040,041,123,143  
 DAYTRON ..... 123  
 DBX ..... 022,023  
 DIMENSIA ..... 013  
 DYNATECH ..... 015,039  
 ELECTROHOME ..... 027,042  
 ELECTROPHONIC ..... 027  
 EMERSON ..... 015,019,025,027,028,034,037  
 ..... 038,039,042,043,044,045,046  
 ..... 047,048,049,050,051,052,053  
 ..... 054,055,056,057,058,059,060  
 ..... 078,118,126,129,130  
 FISHER ..... 024,036,061,062,063,064,065,131  
 FUJI ..... 034,132  
 FUNAI ..... 015,039  
 .....  
 GARRARD ..... 039  
 GE ..... 013,026,034,035,066,128,133  
 GOLDSTAR ..... 022,027,031,067,134  
 GRADIENTE ..... 039  
 .....  
 HARLEY DAVIDSON ..... 039  
 HARMAN KARDON ..... 022,081  
 HARWOOD ..... 074  
 HEADQUARTER ..... 024  
 HITACHI ..... 015,068,069,070,120,124,133,135  
 HI-O ..... 036  
 .....  
 INSTANT REPLAY ..... 034  
 .....  
 JCL ..... 034  
 JC PENNEY ..... 022,023,024,026,027,034,035  
 ..... 068,069,071,072,073,120,131  
 JENSEN ..... 124  
 JVC ..... 022,023,024,031,071,124,136  
 .....  
 KENWOOD ..... 022,023,024,029,031,071,124,136  
 KLH ..... 074,144  
 KODAK ..... 027,034  
 .....  
 LLOYD ..... 015,039  
 LOGIK ..... 074  
 LXI ..... 027  
 .....  
 MAGNAVOX ..... 034,035,075,076,117,121,137  
 MAGNIN ..... 026  
 MARANTZ...022,023,024,029,031,034,071,075,077  
 MARTA ..... 027  
 MASUSHITA ..... 034  
 MEI ..... 034  
 MEMOREX ..... 014,015,024,026,027  
 ..... 034,036,039,056,117  
 MGA ..... 042,078,126  
 MGN TECHNOLOGY ..... 026  
 MIDLAND ..... 066  
 MINOLTA ..... 068,069,120  
 MITSUBISHI ..... 042,068,069,078,079  
 ..... 080,081,082,083,084  
 ..... 085,086,087,119,126,136  
 MONTGOMERY WARD ..... 014,088  
 MOTOROLA ..... 014,034  
 MTC ..... 015,026,039  
 MULTITECH ..... 015,026,039,066,074

NEC ..... 022,023,024,029,031,071,077  
 ..... 089,090,091,092,124,136  
 NIKKO ..... 027  
 NOBLEX ..... 026  
 .....  
 OLYMPUS ..... 034  
 OPTIMUS ..... 014,027  
 OPTONICA ..... 109,147  
 .....  
 PANASONIC ..... 034,035,122,138,139,140  
 PENTAX ..... 029,068,069,029,120,133  
 PENTEX RESEARCH ..... 031  
 PHILCO ..... 034,035,075,076  
 PHILIPS ..... 034,075,109,137  
 PILOT ..... 027  
 PIONEER ..... 023,068,093,094,136  
 PORTLAND ..... 029,030,032,123  
 PROSCAN ..... 013  
 PROTEC ..... 074  
 PULSAR ..... 117  
 .....  
 QUARTER ..... 024  
 QUARTZ ..... 024  
 QUASAR ..... 034,035,138  
 .....  
 RCA ..... 013,016,026,034,068,069,095  
 ..... 096,097,098,099,100,101,102  
 ..... 103,104,120,128,133,138  
 RADIOSHACK/REALISTIC ..... 014,015,024,026,027  
 ..... 034,035,036,039,042  
 ..... 062,063,109  
 RADIX ..... 027  
 RANDEX ..... 027  
 RICOH ..... 141  
 RUNCO ..... 117  
 .....  
 SAMSUNG ..... 018,026,028,046,066,125  
 SANKY ..... 014,117  
 SANSUI ..... 023,105,124,136  
 SANYO ..... 024,026,036  
 SCOTT ..... 025,028,038,045  
 ..... 051,078,106,129  
 SEARS ..... 024,027,034,036,061  
 ..... 062,063,064,068,069  
 ..... 120,131  
 SHARP ..... 014,015,030,042,107,108,109  
 SHINTOM ..... 017,069,074,111,145  
 SHOGUN ..... 026  
 SIGNATURE ..... 015  
 SINGER ..... 034,074  
 SONY ..... 017,111,112,132,141  
 STS ..... 034,120  
 SYLVANIA ..... 015,034,035,039  
 ..... 075,076,078,137  
 SYMPHONIC ..... 015,039  
 .....  
 TANDY ..... 015,024  
 TASHIKO ..... 027  
 TATUNG ..... 071,124  
 TEAC ..... 015,039,071,098,124  
 TECHNICS ..... 034,122  
 TEKNIKA ..... 015,027,034,113,142,039  
 TOSHIBA ..... 028,062,064,068,078,106,129  
 TOTEVISION ..... 026,027  
 TMK ..... 026,037,060  
 .....  
 UNITECH ..... 026  
 .....  
 VECTOR RESEARCH ..... 022,023,028,029  
 VICTOR ..... 023





VIDEO CONCEPTS .....	022,023,028,029,126
VIDEOSONIC .....	026
WARDS .....	014,015,026,027,028,034
.....	036,039,042,068,069,074
.....	109,114,115,116,120,129
XR-1000 .....	034,039,074
YAMAHA .....	022,023,024,031,071,124
ZENITH .....	017,111,117,132,141

### CABLE CODES

ABC .....	014,015,016,017,018,019,020
ANTRONIX .....	021,022
ARCHER .....	021,022,023,024
.....	.....
CABLETENNA .....	021
CABLEVIEW .....	021
CENTURY .....	024
CITIZEN .....	024
COLOUR VOICE .....	025,026
COMTRONICS .....	027,028
CONTEC .....	029
.....	.....
EASTERN .....	030
.....	.....
GARRARD .....	024
GC ELECTRONICS .....	022
GEMINI .....	031,032
GENERAL INSTRUMENT .....	016
.....	.....
HAMLIN .....	033,034,035,048
HITACHI .....	016
HYTEX .....	015
.....	.....
JASCO .....	024
JERROLD .....	014,016,018,020,031
.....	036,037,062,063
MAGNAVOX .....	038
MEMOREX .....	039
MOVIE TIME .....	015,040,041
.....	.....
NSC .....	015,040
.....	.....
OAK .....	015,029,042
.....	.....
PANASONIC .....	013,061,064
PARAGON .....	039
PHILIPS .....	024,025,026,032
.....	038,043,044,045
PIONEER .....	046,047
PULSAR .....	039
.....	.....
RADIO SHACK .....	058
RCA .....	013,060
REALISTIC .....	022
REGAL .....	035,048
REGENCY .....	030
REMBRANDT .....	016
RUNCO .....	039
.....	.....
SAMSUNG .....	027,047
SCIENTIFIC ATLANTA .....	019,049,050,051
.....	065,066,067
SIGNAL .....	027,031
SIGNATURE .....	016
SL MARX .....	027
SPRUCER .....	013
STANDARD COMPONENTS .....	052
STARCOM .....	014,020,031

STARGATE .....	027,031
STARQUEST .....	031
.....	.....
TANDY .....	053
TELEVIEW .....	027
TEXSCAN .....	052
TOCOM .....	017,036,054
TOSHIBA .....	039
TUSA .....	031
TV86 .....	040
.....	.....
UNIKA .....	021,022,024
UNITED ARTISTS .....	015
UNITED CABLE .....	014
UNIVERSAL .....	021,022,023,024,055
.....	.....
VIDEOWAY .....	057
VIEWSTAR .....	028,038,040,053,056
.....	.....
ZENITH .....	039
.....	.....

### SATELLITE CODES

AMPLICA .....	028
.....	.....
BIRDVIEW .....	029
.....	.....
CHANNEL MASTER .....	030,031,032
CHAPPARAL .....	013,014,033,034
CHEYENNE .....	014
.....	.....
DRAKE .....	015,016,037,038,039,040
DX ANTENNA .....	035,036
.....	.....
ECHOSTAR .....	041,042,043
.....	.....
FUJITSU .....	044,045
.....	.....
GENERAL INSTRUMENTS .....	017,018,019,046,047,048
.....	.....
JANEIL .....	049
JEROLD .....	050
.....	.....
KENWOOD .....	051
.....	.....
LUXOR .....	052
.....	.....
MACOM STATE .....	053
.....	.....
NORSTAT .....	054
.....	.....
REALISTIC .....	020,056,057
.....	.....
SCIENTIFIC ATLANTA .....	060
SIERRA I, II, III .....	014
STAR TRAK .....	061
STS .....	021,022,023,024,058,059
SUPER GUIDE .....	062
.....	.....
TOSHIBA .....	025,063
.....	.....
UNIDEN .....	026,064
.....	.....
VIDEO CIPHER II .....	027





## LASER DISC CODES

PIONEER .....	093
PROSCAN .....	146
.....	.....
RCA .....	146

## DSS CODES

ECHOSPHERE .....	071
EHOSTAR .....	071
.....	.....
DISH NETWORK .....	071
.....	.....
HUGHES SATELLITE .....	075
.....	.....
PANASONIC .....	069,072
PRIMESTAR .....	070
.....	.....
RCA .....	065
.....	.....
SONY .....	066
STAR SIGHT CABLE SERVICES .....	073
.....	.....
TOSHIBA .....	067,068,074

## CD CODES

ADC .....	013
ADCOM .....	014,067
AIWA .....	015,016
AKAI .....	068,090
AUDIO ALCHEMY .....	017
AUDIO TECHNICA .....	018
.....	.....
BSR .....	017
.....	.....
CALIFORNIA AUDIO LABS .....	069
CAPETRONIC .....	022
CARRERA .....	017
CARVER .....	019,020,021
CASIO .....	070
CURTIS MATHES .....	070
.....	.....
DENON .....	023,024
.....	.....
EMERSON .....	014,025,026
.....	.....
FISHER .....	020,027,028,029,030,071
.....	.....
GE .....	078
GENEXA .....	025,026,031,072
GOLDSTAR .....	032,073
.....	.....
HARMON KARDON .....	033
HITACHI .....	031
.....	.....
INKEL .....	034
.....	.....
JC PENNEY .....	043,070
JVC .....	035
.....	.....
KENWOOD .....	027,036,037,038,080,081
KRELL .....	019
KYOCERA .....	013
.....	.....
LUXMAN .....	039,040,082,083,091
LXI .....	025,070
.....	.....
MAGNAVOX .....	019,084

MARANTZ .....	019,041,042,085
MCS .....	043,070
MGA .....	044
MISSION .....	019
mitsubishi .....	044,045
.....	.....
NAD .....	074,092
NAKAMICHI .....	046,047
NEC .....	043
NIKKO .....	018,026,029
NSM .....	019
.....	.....
ONKYO .....	048,049,075
OPTIMUS .....	017,020,021,025,031
.....	037,050,051,052,053
.....	.....
PANASONIC .....	069,086,093
PHILIPS .....	019,084
PIONEER .....	031,054,055,072
PROTON .....	019
.....	.....
QUASAR .....	069
.....	.....
RCA .....	014,020,025,056,076
RCA Digital Video Disc .....	096
REALISTIC .....	014,020,022,025
.....	026,031,042,050,052
ROTEL .....	019
.....	.....
SAE .....	019
SAMSUNG .....	094
SANSUI .....	019,025,057,076,087
SANYO .....	020,058,071,088,095
SCOTT .....	014,025,026
SEARS .....	025,037,042,070
SHARP .....	037,042
SHERWOOD .....	034,042,051,059
SHURE .....	043
SONY .....	060,061
STS .....	013
SYLVANIA .....	019
SYMPHONIC .....	062
.....	.....
TEAC .....	029,042,052,062,063,064
TECHNICS .....	069,086,089
THETA DIGITAL .....	084
TOSHIBA .....	074
.....	.....
VECTOR RESEARCH .....	017,032
VICTOR .....	035
.....	.....
YAMAHA .....	018,065,066,077

## HOME AUTOMATION CODES

X-10 HOME AUTOMATION (RF) .....	013
X-10 HOME AUTOMATION (IR543) .....	014
GE HOMEMINDER .....	015
.....	.....

 




## USING AUX TO CONTROL A SECOND TV, VCR, CABLE BOX OR SATELLITE RECEIVER

The AUX button is normally used to control an audio component, but it can also be configured to control a second TV, VCR, cable box or satellite receiver.

1. Turn on the equipment you wish to control.

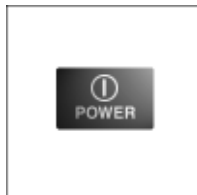


2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.




3. Press the AUX1 or AUX2 button.



 4. Press and release the mode button that matches the A/V equipment you want to control. The LED blinks once.

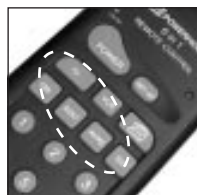

 
5. Enter the 3 digit Code from the Library Code Tables. The LED turns off after the last digit entered.

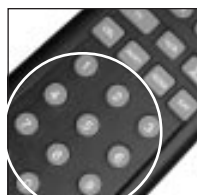

6. Point the remote at your audio component and press the POWER button. Your audio component should turn off.



 7. Turn your audio component on and press CHANNEL +. If it responds, setup is complete.

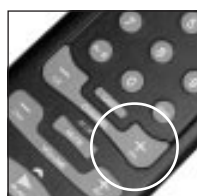


### Notes:

*If your audio/video component does not respond, try the other codes for your brand. If it still doesn't respond, try the Code Search method below.*

*If the LED blinked rapidly when you entered the code, you may have entered an invalid code. Recheck the code in the code list and try again.*

## SEARCHING FOR CODES

 1. Turn on the device you want to control.

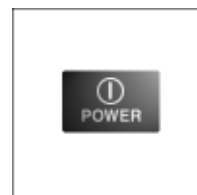


2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.



3. Press the mode button that matches the equipment you want to control. The LED blinks once.



 
4. Press CHANNEL + repeatedly\* until the device to be controlled changes channel.

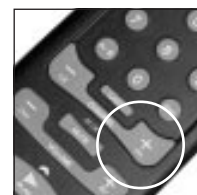

If you go past the code accidentally, just press LAST repeatedly until the channel changes again.



 5. Press and release the ENTER button to complete the setup.

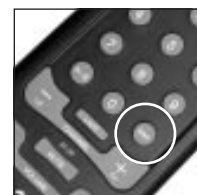



**\*Note:** You might have to press CHANNEL+ many times (50+). If the device does not have a Channel Up function, use the PLAY button (VCR only) or the POWER button.

## IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE

1. Press and hold the SETUP until the LED indicator lights steadily. Release Setup button.



 
2. Press the mode button that matches the equipment you wish to identify. The LED blinks once.




3. Press and release SETUP. The LED blinks once.




4. To find the first digit, press each number button from 0 to 9 until the LED blinks. The number you pressed is the first digit of the code.

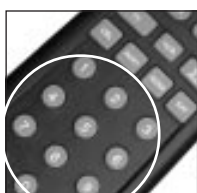

 5. Press each number button from 0 to 9 again as above to find the second digit.

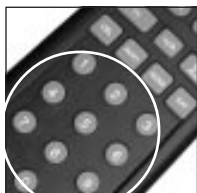

 6. Press each number button in turn to find the third digit. When the third digit has been found, the LED will go out.

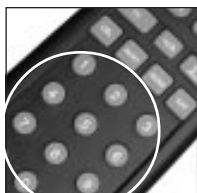


## SETTING THE SLEEP TIMER

The Sleep Timer automatically turns off the TV after the time you set. Press the TV button, then follow the instructions below to set the Sleep Timer:


1. Press and hold TIMER until the LED indicator lights steadily. Release TIMER button.



 2. Use the number buttons to enter the sleep time required (1 to 99 minutes).

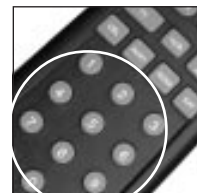

 3. Press ENTER to confirm the setting.

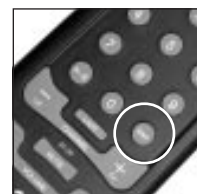

**Note:** Take care to leave the remote pointing at the TV to ensure it turns off the TV at the time you set.






## CONTROLLING X-10 MODULES

 If you have purchased and installed a Transceiver Module, you can control it and other X-10 modules as follows:


1. Press and release the X-10 button.



2. Use the number buttons to enter the Unit Code number of the chosen module. (You do not need to enter '0' first for a single digit number.)

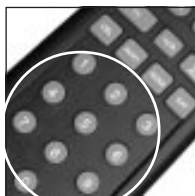

 3. Press the appropriate button for the function you require (see below).

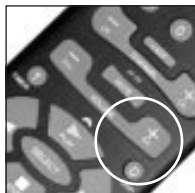

### X-10 FUNCTIONS:

On:	CHANNEL +
Off:	CHANNEL -
Bright:	VOLUME +
Dim:	VOLUME -
All Lamps On:	POWER
All Modules Off:	MUTE

**Note:** You cannot dim or brighten an Appliance Module. If the module was off and you press Bright or Dim (VOLUME+ or VOLUME-) this will simply turn the module on.

### TO SET THE X-10 SLEEP TIMER

The X-10 Sleep Timer switches off the chosen modules after the preset time.

 
1. Press and release the X-10 button.




2. Press and hold TIMER until the LED indicator lights steadily. Release TIMER button.




3. Use the number buttons to enter the module Unit Code for the module to be turned off.

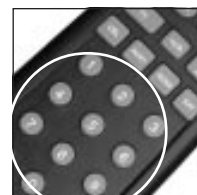

 
4. Press the desired function button (e.g. CHANNEL - to turn the module off after the preset time).

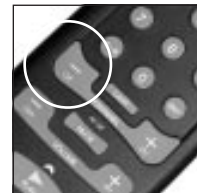

 5. Using the number buttons enter the sleep time required (1 to 99 mins).

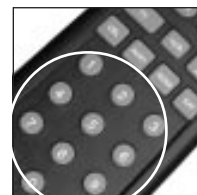

 6. Press ENTER to confirm the setting.

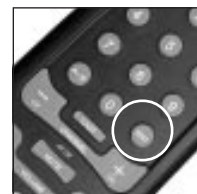

### CHANGING THE X-10 HOUSE CODE:

The SuperRemote defaults to House Code A, and in most cases you will not need to change this unless you are experiencing interference from a neighboring X-10 system.

 
1. Press and release the X-10 button.



2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.




3. Use the number buttons to enter the number equivalent to the chosen House Code (1=A, 2=B .. 16=P).

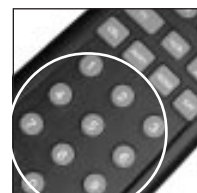



 4. Press the ENTER button to confirm the House Code. The LED turns off.

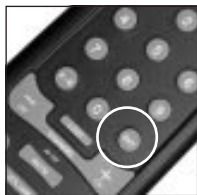

**Note:** The House Code you choose must match the House Code on the Transceiver and Modules you are using it with.

## CONTROLLING AN IR MINI CONTROLLER (IR543)

If you already own an IR Mini Controller, you will need to change the X-10 Home Automation code in the remote to use it. The code for standard X-10 RF Home Automation is 013. The code to control the IR Mini Controller is 014. To change the code:

 
1. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



2. Press and release the X-10 button.



3. Enter 014 to control an IR Mini Controller, or 013 for standard X-10 control. The LED turns off after the last digit entered.

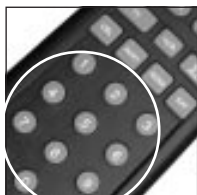

**Note:** In most cases, you will not need to use the IR mini controller to receive commands from the SuperRemote - the Transceiver Module does this for you and has the added advantage of working through walls. You can't control the IR Mini Controller and the Transceiver Module at the same time. See page 31.

## EXPANDING YOUR SYSTEM

The modules illustrated below represent just a few of the wide range of X-10 compatible modules you can choose from to expand your Home Automation system. They are available from electrical outlets, department stores and mail order catalogs.

 
 
X-10 Home Automation products also integrate with X-10 security systems, so you can use the security remotes that come with them to control macros and flash lights when the security system is tripped.

Check out our Web Site at:

[HTTP://WWW.X10.COM](http://www.x10.com)



for more information on these and many other X-10 products.

The **Dual Floodlight Motion Detector PR511** turns on at dusk and/or when it detects movement, and sends X-10 signals to control other modules, or trigger ActiveHome macros.

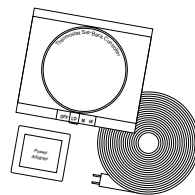

The **Thermostat Setback Controller TH2807** mounts below your thermostat to reduce the room temperature at night or at the times you set to save energy. No wiring needed to your existing thermostat.

  Replace your existing wall switches with the **Wall Switch Module WS467**. Installs like a regular dimmer. On/Off and Bright/Dim functions. Other models available for 3-way and fluorescent lighting.

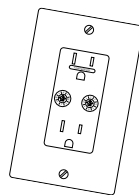



Replace existing AC wall outlets with the **Receptacle Module SR227**. Has one 15A/1800W controlled outlet and one outlet which is always on.






  Use a controller to trigger the **Remote Chime Module SC546** to call Dad up for dinner, or warn people you're about to turn on the sprinklers.

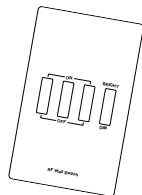

Fit a **Wireless Wall Switch RW724** anywhere you need an extra switch - with no wires. Sends commands to the Transceiver Module just like a remote.

 Use the isolated contacts on the **Universal Module UM506** to control pool pumps, sprinklers, drapes and other low voltage equipment. Includes built in warning beeper.



Switch entrance or garage lights on from your car with the convenient **Keychain Remote KC674**.

The **PowerFlash Module PF284** connects to dry contact or low voltage alarm terminals on your burglar alarm system and flashes X-10 controlled lights when it is triggered.



Plug in a **Heavy Duty Module HD245** to control 220V appliances such as air conditioners and water heaters.

## TROUBLESHOOTING

### The Transceiver Module doesn't respond to the remote:

- Check the House Code on the Transceiver Module is set to 'A.' If you have changed the House Code on the remote (see p. 27), check that it matches the House Code on the module.
- Press the ON/OFF button on the front of the Transceiver to confirm it operates the equipment connected to it.

### The Transceiver Module works, but other modules don't respond:

- Check that the Module has the same House Code as the Transceiver Module.
- Try plugging the Module into a different outlet.

Note: if you use an RF Transceiver (such as the RR501 or TM751) to control X-10 Modules, you will be able to control up to 16 Modules. With a Transceiver, when you press 1-6-ON you turn on Module number 16. However, if you use an IR543, when you press 1-6-ON you turn on Modules 1 AND 6. The IR543 can only control 10 Modules (1-9 plus 0=10).

### The Remote won't control your A/V equipment, or doesn't work at all:

- Use manual controls or the original remote control to confirm the equipment is working properly.
- Be sure you pressed the device key for the device you want to control.
- Re-enter the code for your A/V product from the code listings on pages 12 through 21.
- Try searching for codes as described on page 23.
- Replace the Remote's batteries.







# WARRANTY

## 12 MONTH LIMITED WARRANTY

X-10 (USA) INC. (X-10) WARRANTS ITS PRODUCTS TO BE FREE FROM DEFECTIVE MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AT RETAIL. X-10 AGREES TO REPAIR OR REPLACE, AT ITS SOLE DISCRETION, A DEFECTIVE X-10 PRODUCT IF RETURNED TO X-10 WITHIN THE WARRANTY PERIOD AND WITH PROOF OF PURCHASE.

IF SERVICE IS REQUIRED UNDER THIS WARRANTY:

1. RETURN THE DEFECTIVE UNIT POSTAGE PREPAID TO THE ADDRESS BELOW.
2. ENCLOSE A CHECK FOR \$4.00 TO COVER HANDLING AND RETURN POSTAGE.
3. ENCLOSE A DATED PROOF OF PURCHASE.
4. ENCLOSE YOUR COMPLETED WARRANTY CARD.
5. X-10 IS NOT RESPONSIBLE FOR SHIPPING DAMAGE. UNITS TO BE RETURNED SHOULD BE PACKED CAREFULLY.

THIS WARRANTY DOES NOT EXTEND TO ANY X-10 PRODUCTS WHICH HAVE BEEN SUBJECT TO MISUSE, NEGLIGENCE, ACCIDENT, INCORRECT WIRING OR TO USE IN VIOLATION OF OPERATING INSTRUCTIONS FURNISHED BY US, NOR EXTEND TO ANY UNITS ALTERED OR REPAIRED FOR WARRANTY DEFECT BY ANYONE OTHER THAN X-10. THIS WARRANTY DOES NOT COVER ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED AND NO REPRESENTATIVE OR PERSON IS AUTHORIZED TO ASSUME FOR US ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF OUR PRODUCTS.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, AND/OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO THE ORIGINAL CUSTOMER. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

X-10 (USA) Inc.  
91 Ruckman Rd.  
Closter, NJ 07624-0420

Web Site: <http://www.x10.com>

Printed in Hong Kong  
DRUR19A-1097

